


USER MANUAL

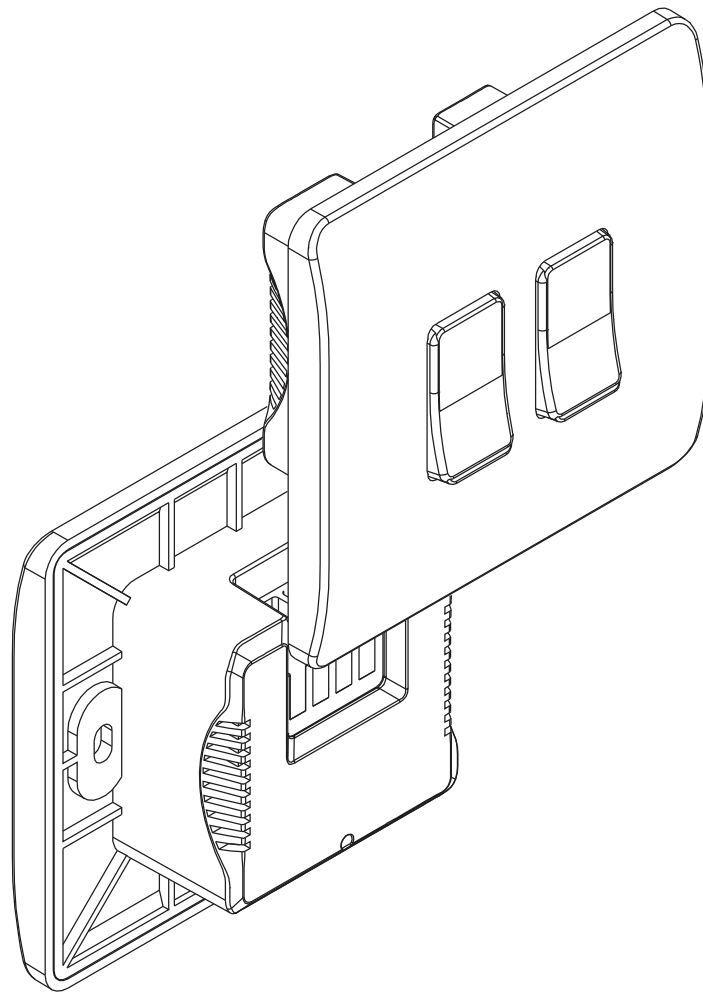


UK No Neutral On/Off Wall Switch | WS01


Ver 10.0




A. PRODUCT SPECIFICATIONS

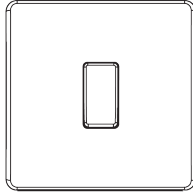

WS01-1G-WH(White)
WS01-1G-BL(Black)
WS01-1G-BN(Brushed Nicle)

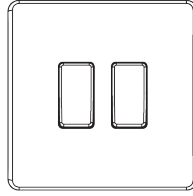


WS01-2G-WH(White)
WS01-2G-BL(Black)
WS01-2G-BN(Brushed Nicle)

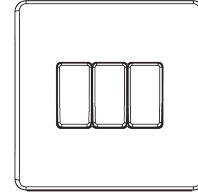

WS01-3G-WH(White)
WS01-3G-BL(Black)
WS01-3G-BN(Brushed Nicle)

PRODUCT CODE	WS01-1G	WS01-2G	WS01-3G
CHANNEL	1CH	2CH	3CH
RADIO FREQUENCY	RF433Mhz		
INPUT VOLTAGE	200-240Vac 50/60Hz		
OUTPUT VOLTAGE	200-240Vac		
OUTPUT CURRENT	4A Max.	3A Max.	2.5A Max.
LED POWER	800W	2*400W	3*250W
IP RATING	IP20		
TEMP. RANGE	-20 ~ 40°C		
HOUSING TEMP.	Ta: 40°C Tc: 85°C		
LIFETIME	50000 Hours		

B. PRODUCT DIMENSIONS


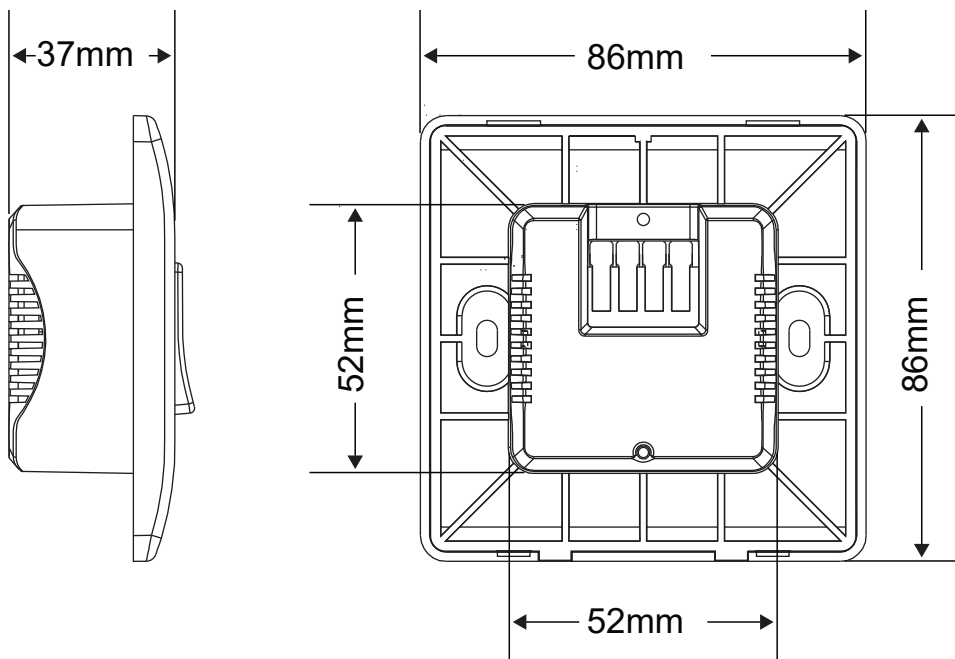


C. INSTALLATION



INSTALLATION CAUTIONS:


- a. Installation must be carried out by licensed electricians.
- b. Do not over-lift the lockup arms on the terminals.
Max opening angle is within 30° from the closed position.

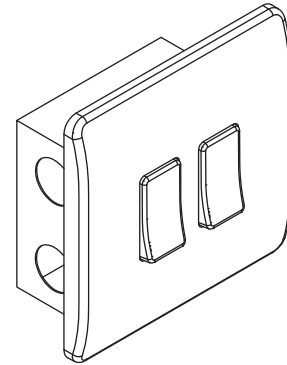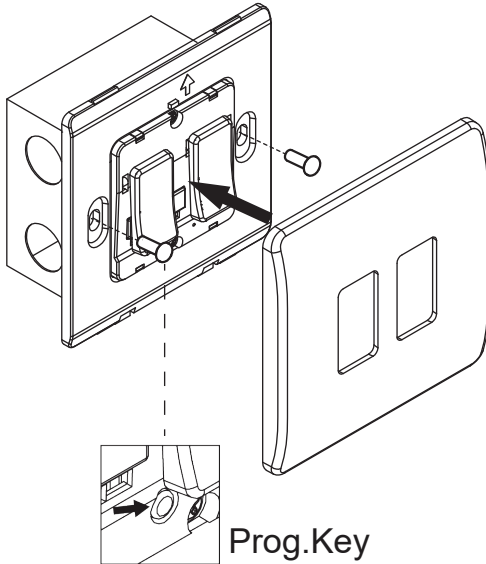

After pairing is completed, attach the panel directly from the front and secure it in place.

D . WIRING DIAGRAM

200-240Vac 50/60Hz

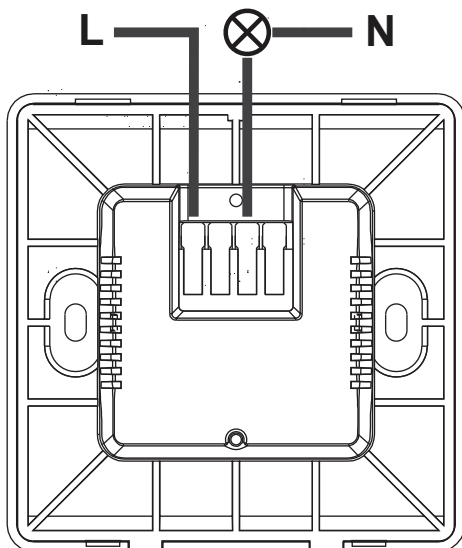

- a. Power must be turn off before installation.
- b. Installation must be carried out by professional electrician.


WS01-1G




WS01-2G



 WS01-3G




E. PAIRING PROCESS OVERVIEW

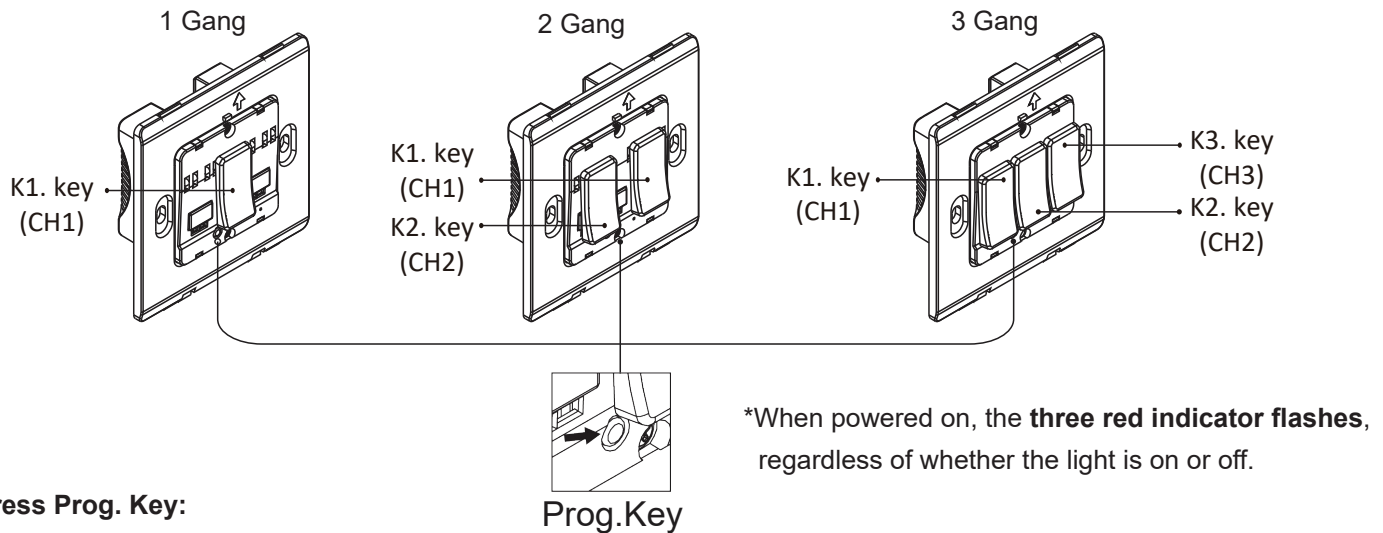

Long Press Prog. Key:

Functions:

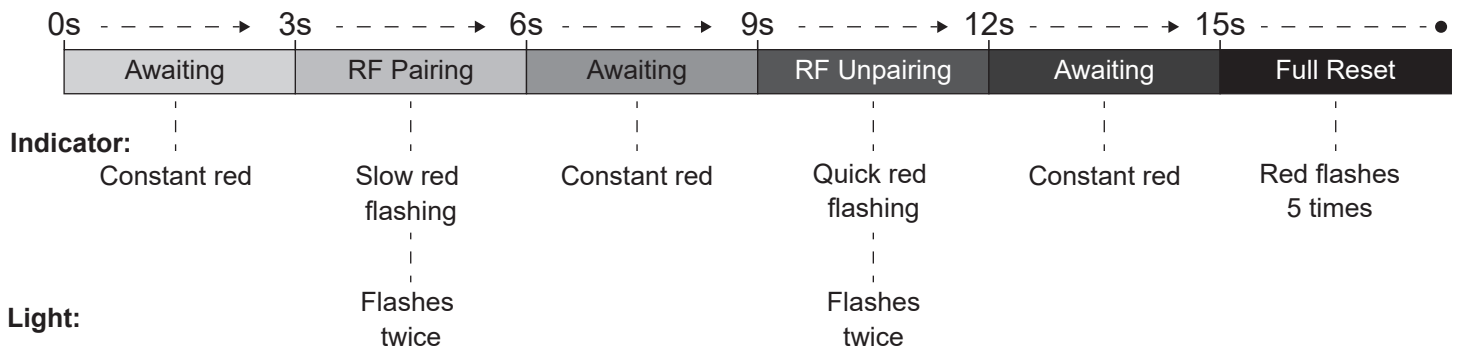

F. PAIRING & UNPAIRING - RF433 REMOTE

Note: To pair, turn on the desired channel (K1/K2/K3) and hold the Prog. Key.

For multi-channel pairing, turn on K1+K2, K2+K3, or all three, then hold the Prog. Key.

Pairing:

Press and hold the Prog.Key for **3s** until the **RED** indicator flashes slowly, and release to enter the pairing mode(**30s**) - the light will flash **Twice** and stay on, press the pairing key of the remote **ONCE** to complete the pairing.

Unpairing:

Press and hold the Prog. Key for **9s** until the **RED** indicator to **flash quickly** and release to enter RF remote unpairing mode(**30s**) - the light would flash **twice** and stay on.

Full Factory Reset:

Press and hold the Prog. Key for **15s** until the **RED** indicator **flashes 5 times** to complete a full factory reset.

*COMPATIBLE RF433 REMOTE (ORDER SEPARATELY)

- 1.Kinetic Switch: Self-powered
- 2.Battery Switch: Battery-powered
- 3.Battery Remote: Battery-powered

***Please refer to the related RF remotes user manual on how to work.**